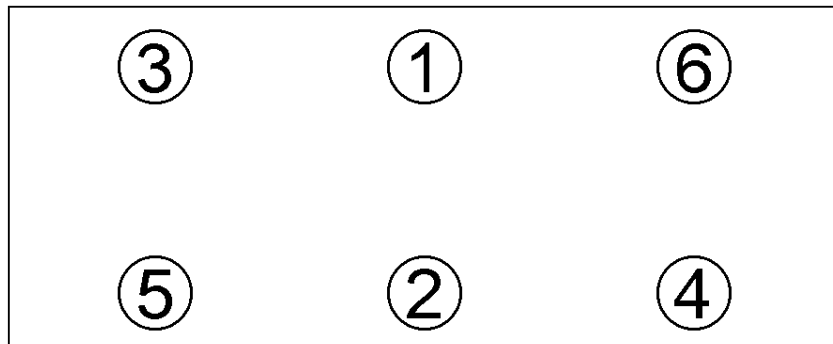


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****182.790**passend für / suitable for
adaptable à / adaptable a**Subaru****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornilloAnziehen/
Tightening/
Serrage/
Apriete

- 29 Nm
- 69 Nm
- 1 - 2: 34 Nm
- 3 - 6: 15 Nm
- 1 - 6: 90°
- 1 - 6: 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Durchm. 89,0 mm

Impreza GC, GF 1992-

Mot. EJ18 1,8i 4WD 1820 ccm SOHC 16V

Legacy BC, BJF 1989- Impreza GC, GF 1992-

Mot. EJ16 1,6i 4WD 1597 ccm SOHC 16V

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/05

182.790