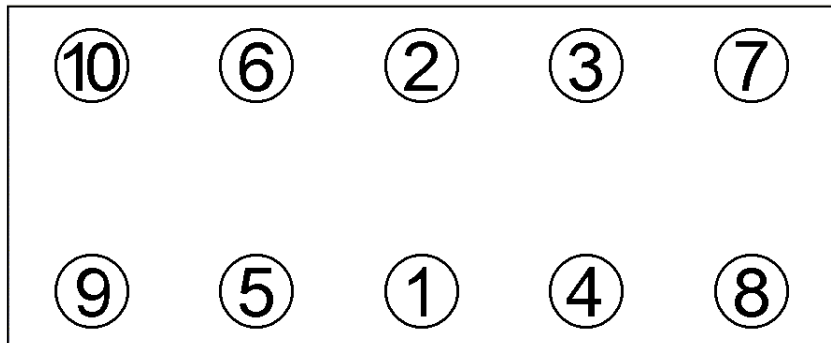


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****467.593**passend für / suitable for
adaptable à / adaptable a**Opel****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo803.010
M 11 x 105Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 25 Nm
- 90°
- 90°
- 90°
- 15°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 87,5 mm; ÷: 1,3 mm

Mot. X20XER, X20XEV, X20SED, Z22XE, T20SED

X22SE, X22XE, Y22SE, Y22XE, C20SEL,

Astra F, Astra G, Calibra, Frontera, Omega B

Sintra, Vectra A, Vectra B

Evanda, Leganza, Nubira, Rezzo, Epika

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

467.593