

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

648.610



passend für / suitable for
adaptable à / adaptable a

Subaru / Toyota / Scion



Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

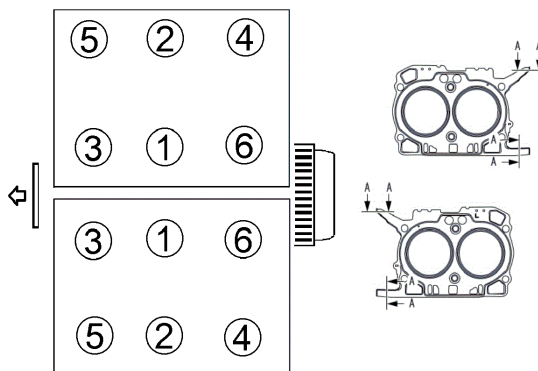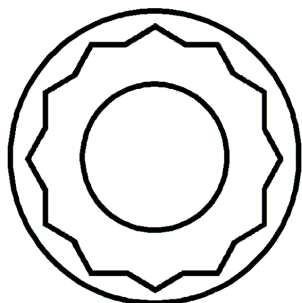

Anziehen/
Tightening/
Serrage/
Apriete

- Pos. A: Dirko Compound
- ☉ 1 - 6: 20 Nm
- ☉ 1 - 6: 100 Nm
- 1 - 6: lösen 360°
- ☉ 1 - 6: 20 Nm
- ☉ 1 - 6: 42 Nm
- 1 & 2: 100°
- 3 - 6: 50°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

2.0 ltr. 16V

mounting position: left

Ø: 89,5 mm / ÷: 0,5 mm

Toyota GT 86

Subaru BRZ

Scion FR-S Coupe

Mot.: FA20

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

648.610