



**Filter, Innenraumluft**

**Hinweis:**

Der Innenraumluftfilter befindet sich im Wagennieren, in Fahrtrichtung rechts hinter dem Handschuhfach.

**Ausbau:**

Das Handschuhfach öffnen und durch Lösen der seitlichen Arretierung entfernen.

(Abb. 1)

Den Innenraumfilterrahmen lösen und entnehmen.

(Abb. 2, 3)

Den Filter vom Rahmen lösen.

(Abb. 4)

**Einbau:**

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

**Auf richtigen Sitz des Filterelements achten!**

**Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!**

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!

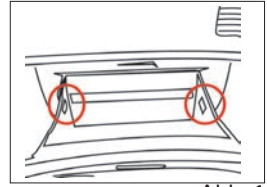


Abb. 1

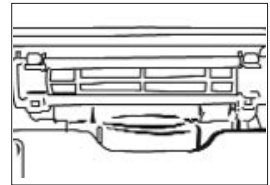


Abb. 2

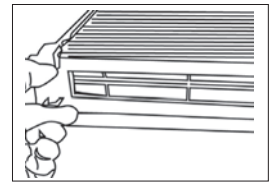


Abb. 3


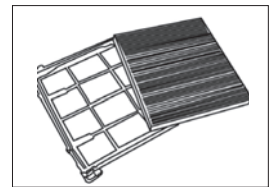


Abb. 4




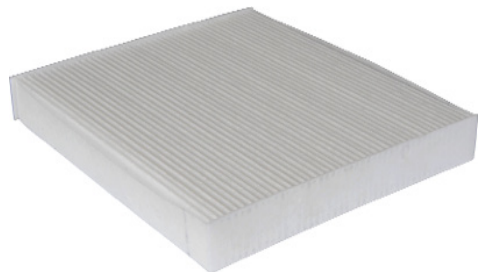

## Filter, Cabin Air

### Note:

The cabin air filter is installed inside the car at the right side behind the glove box.

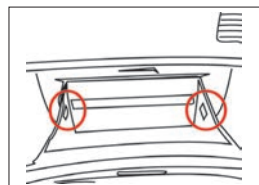


pict. 1

### Filter Replacement:

Open the glove box and remove it by unscrewing the locking system.


(pict. 1)

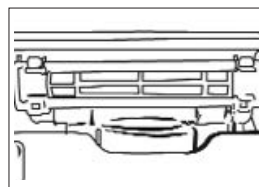

pict. 2

Detach the cabin air filter frame and remove the frame.


(pict. 2, 3)

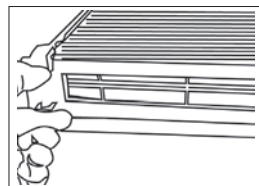

pict. 3

Separate the filter from its frame.

(pict. 4)

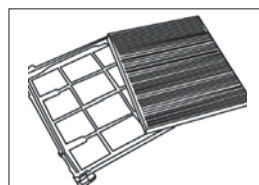

pict. 4

The installation is done in reverse sequence of replacement.

### Take care about correct fitting of the filter!

### Please think about the environment when you throwing away the old filter!

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

