




Radlagersatz

1. Über den Distanzring (siehe Zeichnung) wird das Radlagerspiel eingestellt.
2. Der Lieferumfang beinhaltet jedoch keinen Distanzring.
3. Achten Sie daher bitte beim Austausch des Radlagersatzes darauf, dass der zuvor verwendete Distanzring für den neuen Radlagersatz geeignet ist. Gegebenenfalls muss die entsprechende Distanzring über den Automobilhersteller bestellt werden.
4. Zur Information sind umseitig die Maße der unterschiedlichen Distanzringe mit den entsprechenden Original-Bestellnummern aufgelistet.

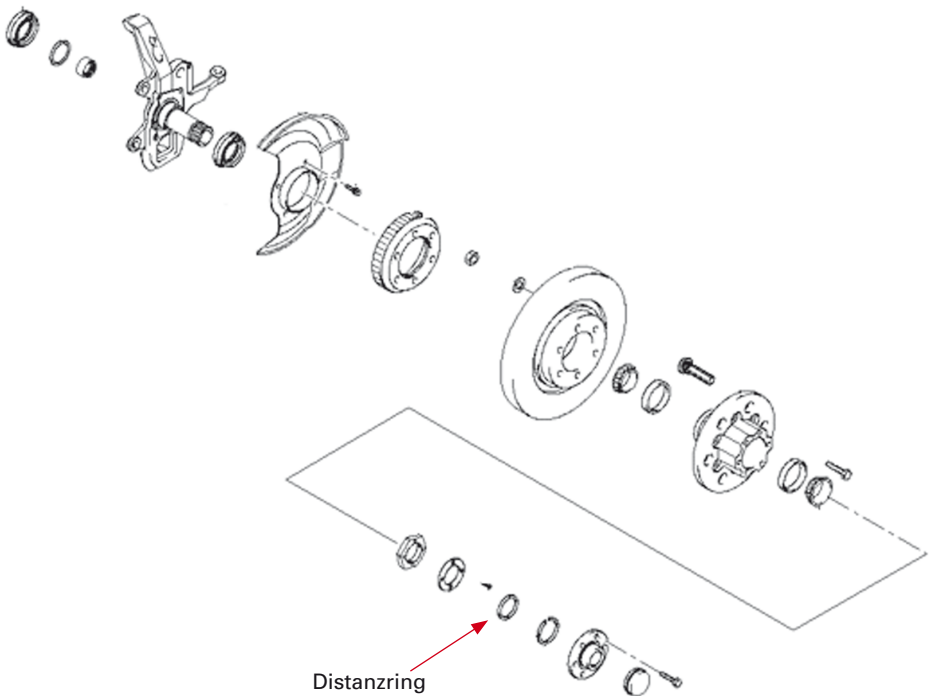




Artikel	Teilenummer	Dicke in mm
Distanzring	MB160770A	0,3
Distanzring	MB620993A	0,4
Distanzring	MB620994A	0,5
Distanzring	MB160771A	0,6
Distanzring	MB160772A	0,9
Distanzring	MB160773A	1,2
Distanzring	MB160774A	1,5
Distanzring	MB160776A	1,8



Wheel bearing set

1. The wheel bearing clearance is regulated through the spacer ring (see drawing).
2. The scope of delivery does not include a spacer ring.
3. For this reason, make sure, when replacing the wheel bearing set, that the spacer ring previously used is suitable for the new wheel bearing set. Otherwise the appropriate spacer ring must be ordered through the vehicle manufacturer.
4. A list of the dimensions of different spacer rings with the respective original order numbers can be found on the reverse.

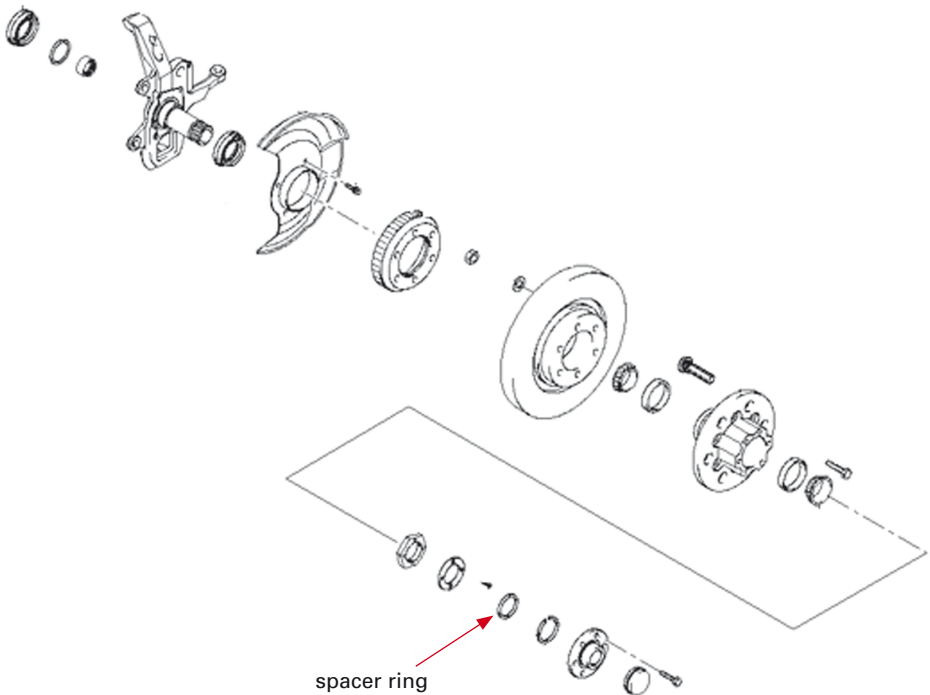



Artikel	Part number	Thickness in mm
Spacer ring	MB160770A	0,3
Spacer ring	MB620993A	0,4
Spacer ring	MB620994A	0,5
Spacer ring	MB160771A	0,6
Spacer ring	MB160772A	0,9
Spacer ring	MB160773A	1,2
Spacer ring	MB160774A	1,5
Spacer ring	MB160776A	1,8