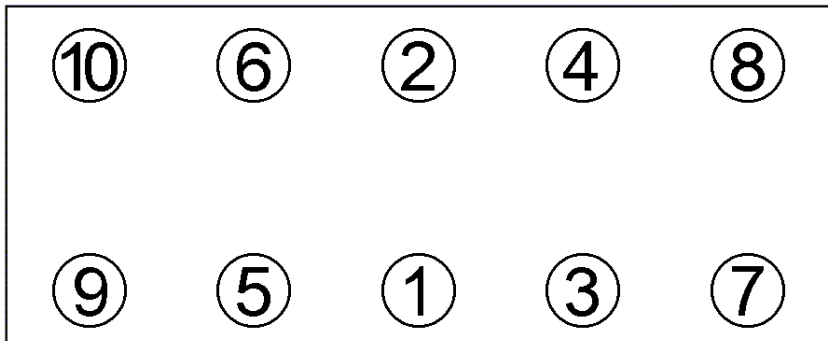


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****425.090**passend für / suitable for
adaptable à / adaptable a**Mercedes-Benz****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

760.060

M 12x1,75x160

Anziehen/
Tightening/
Serrage/
AprieteM 12
55 Nm
> 90°
> 90°M 8
25 Nm**Zeichenerklärung / Explanations / Explication / Explicacion**

| | | | | |
|---|---|------------------------------|--------------------------------|---------------------------------------|
| | neue Zylinderkopf-schrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| * | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
| | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| > | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 97,7 mm; ÷: 1,75 mm

Mot: M 119.970,972,974,982,985

E 420, E 420 T (W 210)

500 E, E 500 (W 124) Mot.008947>

500 SE,SEL,SEC, S 500 (C/W 140) Mot.048513>

500 SL, SL 500 (R 129) Mot.010749>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

425.090