


10'


Ford Maverick
Nissan Terrano II

1

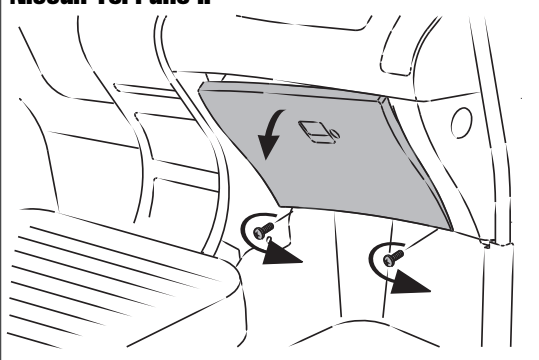


Ford Maverick
Nissan Terrano II

2

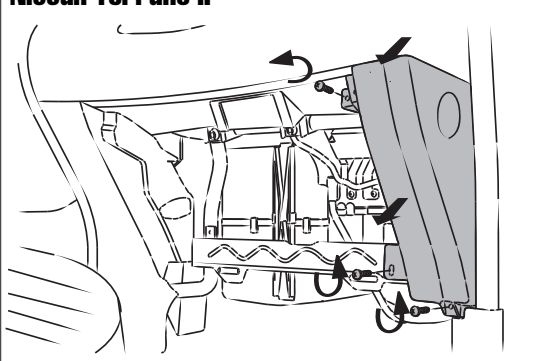


Ford Maverick
Nissan Terrano II

3

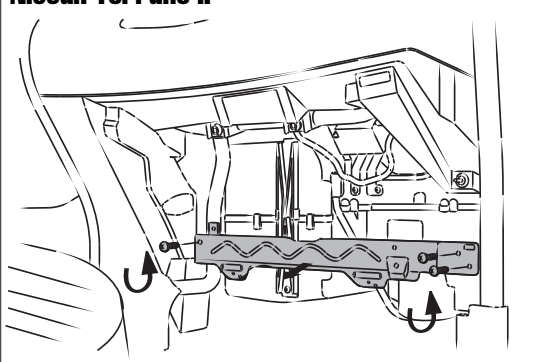


Ford Maverick
Nissan Terrano II


4

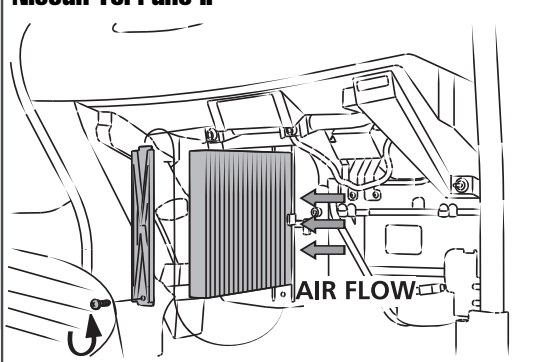

5

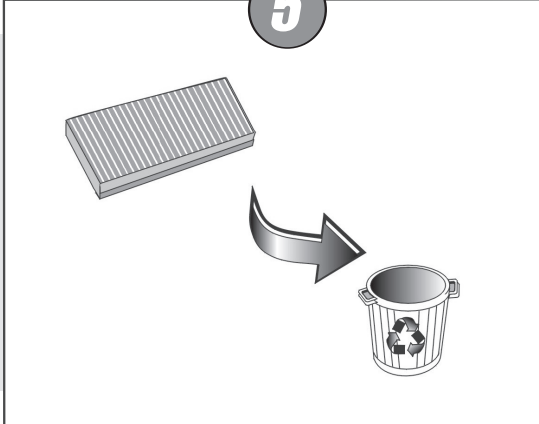

filters NC 2092 FORD Maverick, NISSAN Primera (P11), Terrano II

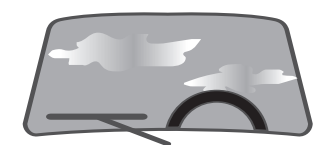


Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.



Para concluir la instalaci3n, seguir el orden inverso.

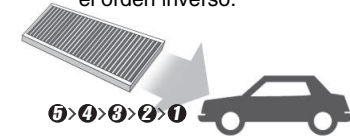

20'


Nissan Primera

1

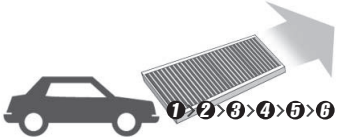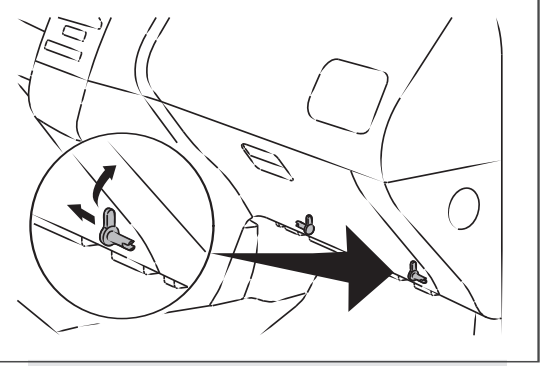


4

Nissan Primera

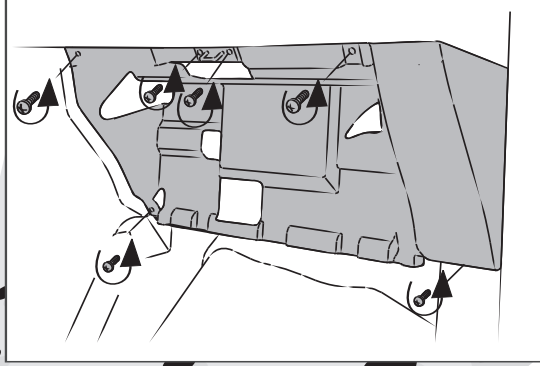


2

Nissan Primera

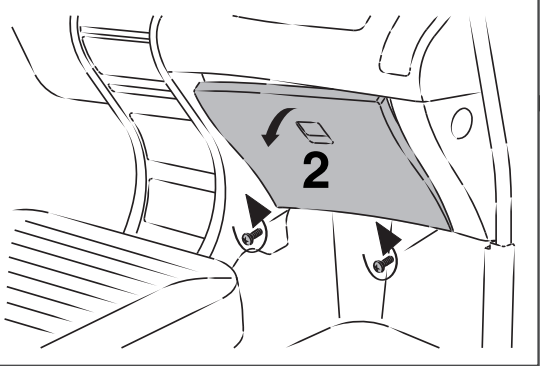


5

Nissan Primera

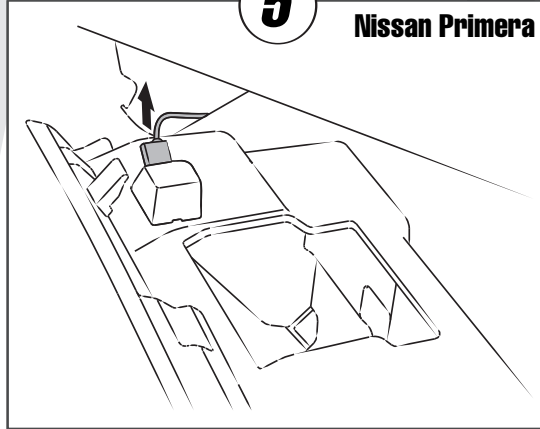


3

Nissan Primera

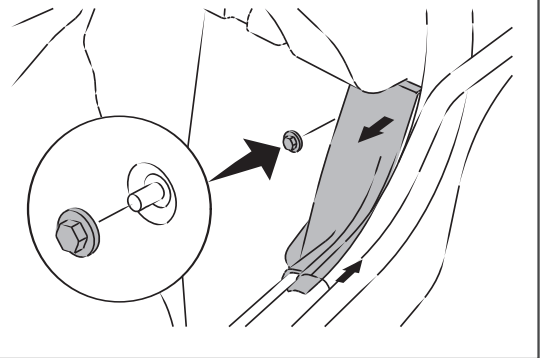


6

Nissan Primera

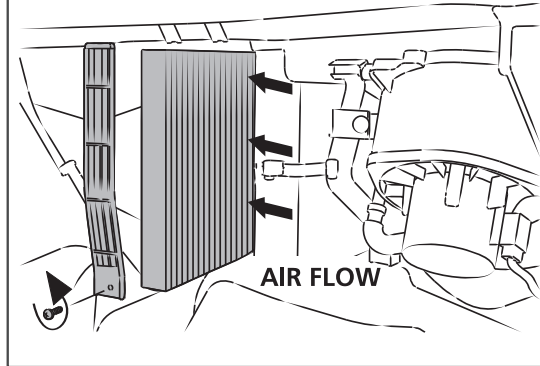

7

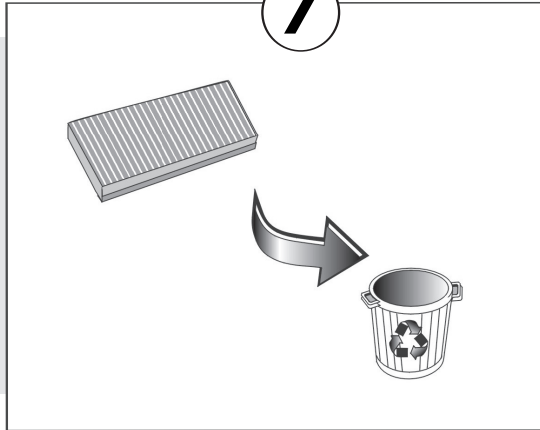

filters NC 2092 FORD Maverick, NISSAN Primera (P11), Terrano II

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalaci3n, seguir el orden inverso.

