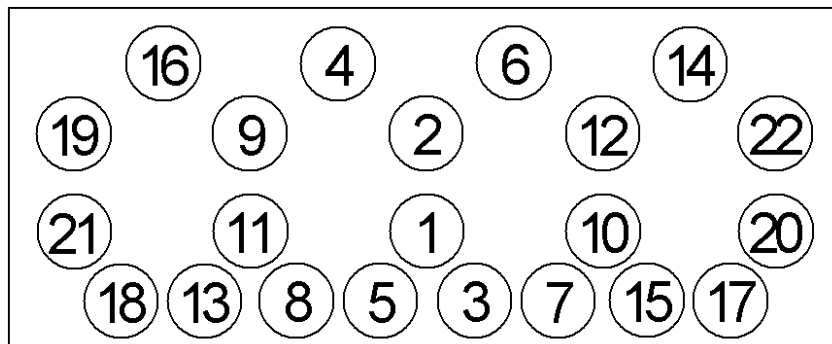


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****181.010**passend für / suitable for
adaptable à / adaptable a**Fiat / Iveco****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

374.180

M 12x1,25x90/163

Anziehen/
Tightening/
Serrage/
Apriete 60 Nm
60 Nm
 180°**Zeichenerklärung / Explanations / Explication / Explicacion**

| | | | | |
|---|---|------------------------------|--------------------------------|---------------------------------------|
| | neue Zylinderkopfschrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| * | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
| | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,6 mm, Ø 96 mm

Fiat Ducato 2,8 D/Maxi ab 09/1998>

Iveco Daily 30.8/35.8 ab 1998>

Iveco Daily 29 L9/35 S9/35 C9 ab 07/1999>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/05

181.010