

# TIMKEN



## WHEEL-PAC™ REPAIR KIT FITTING INSTRUCTIONS TRAILER/STEERING AXLE

Please see reverse side for details.  
DE, ES, FR, HU, IT, PL, PT, RO, RU, SE, TR

**⚠ WARNING**  
Failure to observe the following warnings  
could create a risk of death or serious injury.



IG-E1000-rev1118

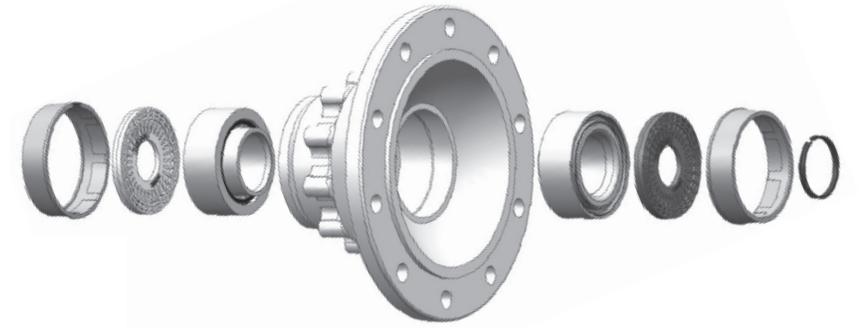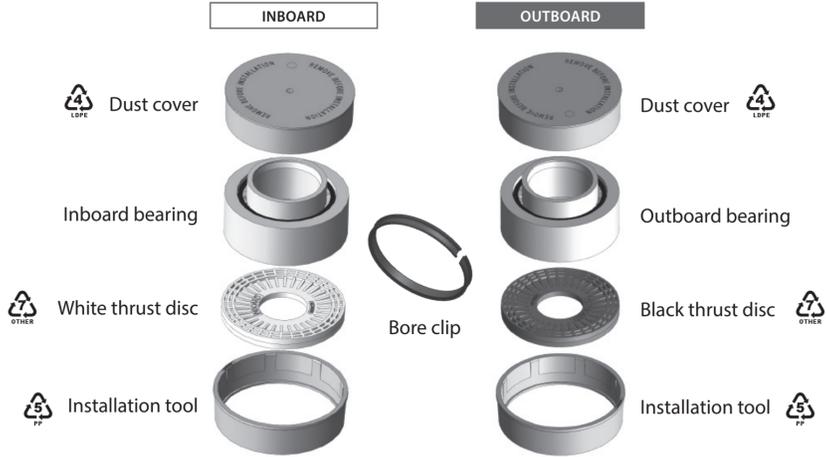

**1**

Remove the damaged/worn bearings from the wheel hub.

**2**

Clean the hub and ensure that the bore, lead-in chamfers and shoulder are free of burrs and show no damage or excessive wear.

OUTBOARD

**3**

Install the outboard bearing (black disc) first. Remove the orange-colored dust cover from the outboard bearing.

**4**

Position the outboard bearing in the hub bore and make sure the bearing is properly aligned.

**5**

Use a mounting plate which contacts the maximum flat surface of thrust disc and has adequate thickness. Mounting plate should not come in contact with tapered surface of thrust disc.

**6**

Gradually apply a continuous pressure to the thrust disc until the bearing is seated.

**7**

Remove the installation tool and the black thrust disc.

**8**

Invert the Hub. Verify that the bearing is properly seated.

INBOARD

**9**

Remove the orange-colored dust cover from the inboard bearing (white disc).

**10**

Position the inboard bearing in the hub bore and make sure the bearing is properly aligned.

**11**

Use a mounting plate which contacts the maximum flat surface of thrust disc and has adequate thickness. Mounting plate should not come in contact with tapered surface of thrust disc.

**12**

Gradually apply a continuous pressure to the thrust disc until the bearing is seated.

**13**

Remove the installation tool and the white thrust disc.

**14**

Verify that the bearing is properly seated.

OPTIONAL STATIC SEALING

**15**

If an O-Ring is delivered with the bearing assembly, install it in the inboard cone groove. If no O-Ring is delivered with the Assembly, it is not required.

BORE CLIP INSTALLATION

**16**

**IMPORTANT!**  
Before inserting the bore clip, invert the hub with the inboard bearing face down on a flat surface. If the inboard bearing does not support the hub a spacer is required.

**17**

Insert the bore clip with the outboard bearing face up until a «CLICK» is heard.

**18**

Verify that the bore clip retains both inboard and outboard bearing inner rings over the entire 360° positioning area.

