


Cylinder Head Tightening Instructions

HG867



	1	2	3	4	5	6
Reference	HG867A	HG867B	HG867C	HG867	HG867E	
Piston	0.51-0.55	0.56-0.59	0.60-0.63	0.64-0.67	0.68-0.71	

Headbolt Tightening Sequence

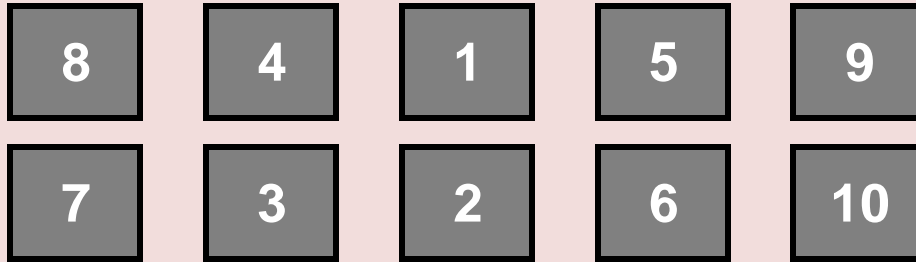

Fitment Procedure

	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Stage 6	Stage 7	Stage 8	Retighten?
Bolt Type 1									
Kilos	2 Kpm	4 Kpm	6 Kpm	-90°+6 Kpm	+90°	+90°			
Pounds	15 lbft	29 lbft	43 lbft	-90°+43 lbft	+90°	+90°			
Newton M's	19.6 Nm	39.2 Nm	58.8 Nm	-90°+58.8 Nm	+90°	+90°			
Bolt Type 2									
Kilos									
Pounds									
Newton M's									
Bolt Type 3									
Kilos									
Pounds									
Newton M's									
Bolt Type 4									
Kilos									
Pounds									
Newton M's									

Fitment Key Description of Required Procedure

-/+ X°	Loosen or tighten the head bolt by the 'X'-value specified in the stage. Follow indicated tightening order.
<>	Run the engine until it reaches working temperature. Let the engine cool with the bonnet open for a minimum of four hours. Remove the expansion tank cap. Should retightening be required, loosen by 90° and then retighten observing the tightening procedure above.
Retighten?	If required, should be performed between 620-930 Miles (1000-1500 Km).